


# AIRFLOW DIRECTION INCORPORATED

## PRODUCTS - "VISUAL ONLY" SWITCHABLE PRESSURE MODE

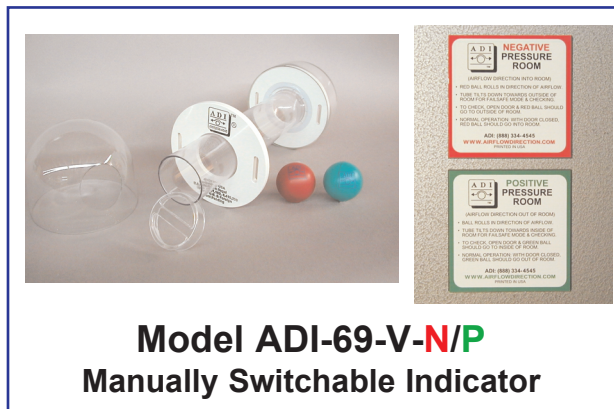

**Model ADI-69-V-N/P**  
Manually Switchable Indicator



**Model ADI-69-V-CURVE**

### BRIEF OVERVIEW OF SWITCHABLE ROOM, VISUAL-ONLY UNITS

ADI offers two models shown above for switchable pressure mode rooms. The basic differences are the failsafe position of the ball, and other features shown in the table below and described in the catalog.

	Model ADI-69-V-N/P	Model ADI-69-V-CURVE
Room is <u>seldom</u> switched & there's <u>available staff</u> to manually switch the indicator mode.	<b>PREFERRED</b>	
Room is <u>switched often</u> and/or there's <u>no available staff</u> or desire to manually switch indicator mode.		<b>PREFERRED</b>
Ball falls to other side of wall in failsafe mode & checkout.	<b>YES</b>	<b>NO</b>
Ball falls to inside the wall in failsafe mode & checkout.	<b>NO</b>	<b>YES</b>
Unit is similar to the single mode, <u>dedicated</u> room airflow direction indicators that may be used elsewhere in the facility. Therefore, the staff is acquainted with: <ol style="list-style-type: none"> <li>the operation of the unit;</li> <li>the desired room pressure mode via the color of the ball, i.e. red ball is a negative room, green ball is a positive room;</li> <li>the failsafe position of the ball when the door is opened, i.e. on the other side of the wall: outside of the room for negative rooms, inside the room for positive rooms.</li> </ol>	<b>YES</b>	<b>NO</b>
Unit comes with two magnetic backed labels (one negative and one positive) to tell the staff the desired room pressure mode and how the indicator operates.	<b>YES</b>	<b>YES</b>
Unit comes with one adhesive label to tell the staff how the indicator operates. Useful when the staff wants to use their own signage to indicate the desired room pressure mode.	<b>NO</b>	<b>YES</b>